

# DEPRAG

## Operating Instruction Booklet

### Pneumatic Drilling Machine

101-227  
101-227L  
101-227-3

302018 A  
302018 C  
302018 D

Dear Customer:

This tool is the result of more than 70 years of experience in the design and manufacturing of pneumatic tools for the industrial market.

We kindly ask that you read these operating instructions carefully so that you will be able to use this tool safely and for many years to come. If you need additional information, please contact your DEPRAG

Representative, one of our international support offices or us direct at DEPRAG. We will be happy to answer any questions. Please visit our web site: [www.deprag.com](http://www.deprag.com)

## Content

1	SAFETY TIPS .....	3
1.1.	General Safety Tips .....	3
1.2.	General Safety Tips for Drills and Grinders .....	4
1.3.	Owner Obligation .....	5
1.4.	Operator Obligation .....	5
1.5.	Warranty and Liability .....	6
1.6.	Symbol Description .....	7
1.7.	Observe Environmental Regulations .....	9
2	DESIGNATED EQUIPMENT USE .....	9
3	INSTALLATION .....	10
4	OPERATION .....	11
5	HANDLING AND START-UP .....	11
6	ASSEMBLY - DISASSEMBLY .....	12
6.1.	Special Repair Tools (Optional Equipment) .....	12
6.2.	Spare Parts Drawing .....	13
7	MAINTENANCE AND UPKEEP .....	14
7.1.	Wear Parts .....	14
8	TROUBLE SHOOTING .....	15
9	DELIVERY CAPACITY .....	16
10	STORAGE .....	16
11	TECHNICAL DATA .....	17
12	DISPOSAL .....	18
13	CONFORMITY DECLARATION .....	19
14	SERVICE LOCATIONS AND AUTHORIZED PARTNERS .....	20

## 1 Safety Tips

### 1.1. General Safety Tips



**Before operating tool make sure to carefully read and observe this operating instruction.**

Generally, the operator of the equipment and/or machinery is responsible for the equipment's perfect condition and operation, while observing all necessary safety regulations. The equipment and/or machinery has been constructed in accordance with the newest level of technology while recognizing all necessary safety-related requirements. Nevertheless, while operating the equipment and/or machinery there is a risk of bodily harm to the operator as well as damage to equipment and/or machinery and other property.

Operate the equipment and/or machinery only if equipment/machinery

- Is used for the task it was designed for
- is in perfect working condition and safe to use.

It is important to observe the technical data of the equipment, especially in regards to the environmental temperatures. The designated area of use for this equipment is clearly described in chapter *Designated Equipment Use* and those requirements have to be observed as well. Prerequisite for the safe conduct and the uninterrupted operation of the equipment, is the knowledge of the basic safety tips and the safety regulations. Additionally, all current regulations for a safe operational area, for accident-prevention guidelines of electrical and mechanical installations, as well as noise suppression demands must be observed. During any maintenance or repair work, a clean work surface is recommended. Also, it is not recommended to either eat or smoke during repair or maintenance. Arbitrary changes made to the equipment, which alters its designated use, voids the warranty and cancels the manufacturers liability.


- The tool is not insulated to protect against an electrical power surge.
- It is not recommended to use this tool in explosive hazardous environments, unless it was specifically designed for such a use.
- During the disconnection or reconnection of the tool from the compressed air, an injury is possible because of a whipping pressure-hose.

The operating instruction booklet, especially the safety symbols and safety tips attached to the equipment or included in the documentation, must be observed at all times by all persons getting into contact with the equipment.

## 1.2. General Safety Tips for Drills and Grinders



- Use a secondary handle (side handle), if reaction torque cannot be safely supported by one hand.
- If the machine locks-up, an increased reaction torque occurs. Reason for lock-up: Tool operates over capacity; jamming of the drill bit in material or when drill bit breaks through the material.
- An unexpected motion of the tool or the breakage of a drill bit may cause an injury.
- Uncomfortable or incorrect holding of tool, will not allow Operator to correctly react to an unexpected motion of the tool..
- Disconnect tool from air supply, prior to changing inserts.
- Prior to operating tool, make sure that collet and drill bit is securely installed.
- Wear no loose clothing or jewelry, for movable parts [collet/bit] may seize them. Wear a hairnet if operator has long hair.

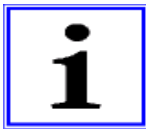

- Use integrated or additionally supplied side-handles to reduce reaction torque.
- Reduce down pressure, shortly before bit breaks through the material to be drilled.
- Prior to operating tool, remove key from chuck.
- If the tool is to be suspended from a Balancer, make sure it is securely attached to it.
- Make sure to not exceed maximum operating pressure given by manufacturer. Add a pressure regulator to check operating pressure before reaching the actual tool.
- Keep in mind that tool will continue to rotate, once it has been turned off. [inertia]
- Turn tool off, if the airflow is suddenly disrupted.

## 1.3. Owner Obligation

The owner is obliged to only let persons operate the equipment, who

- are familiar with basic work environment safety rules and accident-preventing regulations. Also, those persons must have been instructed in the correct use of the equipment.
- have read and understood all safety and warning notifications in the Operating Instruction Booklet, as well as all other documentation pertaining to this equipment.
- check and confirm at regular intervals, that a safety oriented operation is guaranteed.

Only qualified and authorized personnel is allowed to operate, maintain and repair this equipment. A malfunction, which impairs operator safety, must be immediately removed.

## 1.4. Operator Obligation

Personnel, who is engaged in the operation of the equipment, must always be committed to

- observe the basic safety and accident preventing regulations,
- read and observe the safety and warning notifications of this operating instruction booklet.

## 1.5. Warranty and Liability

Unless otherwise specified, our “General Sales and Delivery Conditions” apply. Warranty and liability claims in regards to persons or equipment damages are invalid, if one or several of the following causes apply:

- Use of the equipment in a non-designated application.
- Improper installation, operation, service or maintenance of the machine.
- Operation of the machine with either defective or removed safety and protection devices.
- Non-observance of the requirements stated in the operating instruction booklet, in regards to transportation, storage, mounting, installation, operation, maintenance and service of the equipment.
- Structural change or adjustment on the equipment to a non-designated use.
- Inadequate supervision of wear parts.
- Improper repair, inspection or maintenance.
- Catastrophic cases because of a war, acts of god or other reasons which are beyond our control.

## 1.6. Symbol Description



Read and observe the Operating Instruction Booklet, prior to and during operation of tool.



### **DANGER**

Reference to an immediate danger to a person. May lead to serious injuries or even death, if unobserved!



Properly recycle environmentally damaging grease, cooling agents or detergents



### **RECOMMENDATIONS**

Important or additional information on the equipment or in the documentation



Use eye protection or wear safety goggles




Wear hearing protection



Warning against hand-injuries.

Attention: Keep away your hands from areas, which are marked with this symbol!

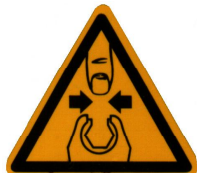

Hands may be crushed, seized or otherwise injured.



## ESD-protected area

Equipment may be damaged or destroyed by an electrostatic discharge.

Maintenance and repair on hydraulic and pneumatic equipment may only be performed by specially trained personnel!



Disconnect equipment from air supply, prior to repair of pneumatic or hydraulic equipment.

Provide regular preventive maintenance on hoses and airlines. Exchange hose lines, even if there is no visible damage! (Observe corresponding requirements of the manufacturer!)

After repair and maintenance, check the following items:

- make sure all detached and re-attached connections are solid.
- confirm that removed covers, screens or filters were re-installed
- During disconnecting or reconnecting of an air-operated equipment, injury may occur due to a whipping air-hose

After conclusion of maintenance or repair and prior to start of operation, make sure to

- remove all materials, tools and other supplies needed for the maintenance or repair from work area of the equipment
- remove leaking liquid or oils
- make sure all safety devices on the equipment work perfectly!

## 1.7. Observe Environmental Regulations



When working on or with the equipment, it is imperative to observe all requirements in regards to waste-disposal and proper recycling.

Especially during installation, repair or maintenance, water damaging agents such as

- lubricating grease and oil
- hydraulic fluid
- cooling agents
- solvent-containing cleaning agents

must not leak into the ground or into the sewage system!

Such materials must be stored, transported, contained and recycled in suitable containers.

## 2 Designated Equipment Use

The drill has been designed for drilling into steel, aluminium or other materials.

### 3 Installation

- Blow out air line and pressure hose, prior to connection it to the equipment.
- The hoses must be free of bends and kinks.
- Make sure, that all air lines have a sufficient cross-section and remove possible throttle areas.
- All DEPRAG Drills as well as Tappers, may be operated either with or without lubricated air. (see paragraph: Maintenance and Upkeep) When operating with oilfree air, a performance reduction of up to 20% occurs!
- Connect the equipment as follows:

a) for standard operation connect equipment to a maintenance unit, consisting of Filter with condensation reservoir, Regulator and Oiler. When choosing a maintenance unit, observe air consumption of the machine (see Technical Data)

Air Consumption	Part No.
< 0,5 m <sup>3</sup> /h	820454 A
0,15 – 1,5 m <sup>3</sup> /h	820455 A
0,8 – 6,0 m <sup>3</sup> /h	821608 A

b) for the use with minimal lubrication connect to a filter-regulator consisting of Filter with condensation reservoir and pressure regulator

Air Consumption	Part No.
< 0,5 m <sup>3</sup> /h	822408 A
0,15 – 1,5 m <sup>3</sup> /h	826981 A
0,8 – 6,0 m <sup>3</sup> /h	822409 A

in connection with a Point-of-Use Oiler (Part No. 378077 A)

c) For oilfree operation, connect to Filter/Regulator, consisting of Filter with condensation reservoir and Pressure Regulator.

Air Consumption	Part No.
< 0,5 m <sup>3</sup> /h	822408 A
0,15 – 1,5 m <sup>3</sup> /h	826981 A
0,8 – 6,0 m <sup>3</sup> /h	822409 A

- Check air pressure at F/R/L outlet. The Regulator needs to be adjusted to an airflow of 6.3 bar (90 PSI). A higher pressure than 6.3 bar leads to increased wear and tear. Pressure below 6.3 bar leads to performance loss.

In regards to air-quality according to ISO8573-1, we recommend:

	CLASS	RESIDUE OF OIL	RESIDUE OF DUST		RESIDUE OF WATER	
		Content mg/m <sup>3</sup>	Particle Size μm	Concentration max. mg/m <sup>3</sup>	Dew Point °C	Pressure Concentration max. g/m <sup>3</sup>
Lubricated Air	4	5	15	8	+3	6
Dry Air	3	1	5	5	-20	0,88

## 4 Operation

Prior to operation, make sure that the drill bit is inserted into the collet as deep as possible and that collet has been securely tightened using the wrench 804647. (see Safety Tips for Drills and Tappers)



### Caution

**Before operating the tool, test drill bit and make sure it is securely installed. A loose drill-bit causes injuries.**

## 5 Handling and Start-Up

Use the equipment only while observing all safety tips and maintenance regulations.

The drill spindle starts by trigger 321761.

## 6 Assembly - Disassembly

**Disassembly:** (see Spare Parts Drawing)



**Prior to disassembly, disconnect equipment from air-supply! Only experienced maintenance personnel may assemble or disassemble this equipment.**

After repair or maintenance, verify that equipment runs to specification!

Principally, use only DEPRAG original spare parts. Otherwise, a reduction in equipment power output and an increased maintenance requirement will occur.

If NON-DEPRAG parts are installed, DEPRAG is entitled to void any existing warranty and liability obligations.

1. Push off Drill Chuck 804655 by using Press Bolt 460227/1.
2. Use Wrench 460360 to remove Screw Joint 301244 or 302917/2 (left-hand thread).
3. Unscrew Lock Cover 302021.
4. Remove motor and gearing parts from pistol grip 302022.
5. Remove Bearing Cover 302024 or 302024/1 and check vanes 312030/3.
6. Minimum width of vane should be 4,5 mm. Vanes, which have a smaller width or show visible damage, need to be replaced.


**Assembly:** (see Spare Parts Drawing)

Proceed in reverse sequence.

### 6.1. Special Repair Tools (Optional Equipment)

<b>PART No.</b>	<b>NAME</b>
460227/1	Press Bolt (for 804655 Drill Chuck)
460360	Wrench (for 301244 Screw Joint)
805081	Pin Wrench (for 302021 Screw Joint)
460474	Fixing Device (for 312028 Rotor Cylinder)
800410	Wrench AF 14
800405	Spanner AF 17

## 6.2. Spare Parts Drawing

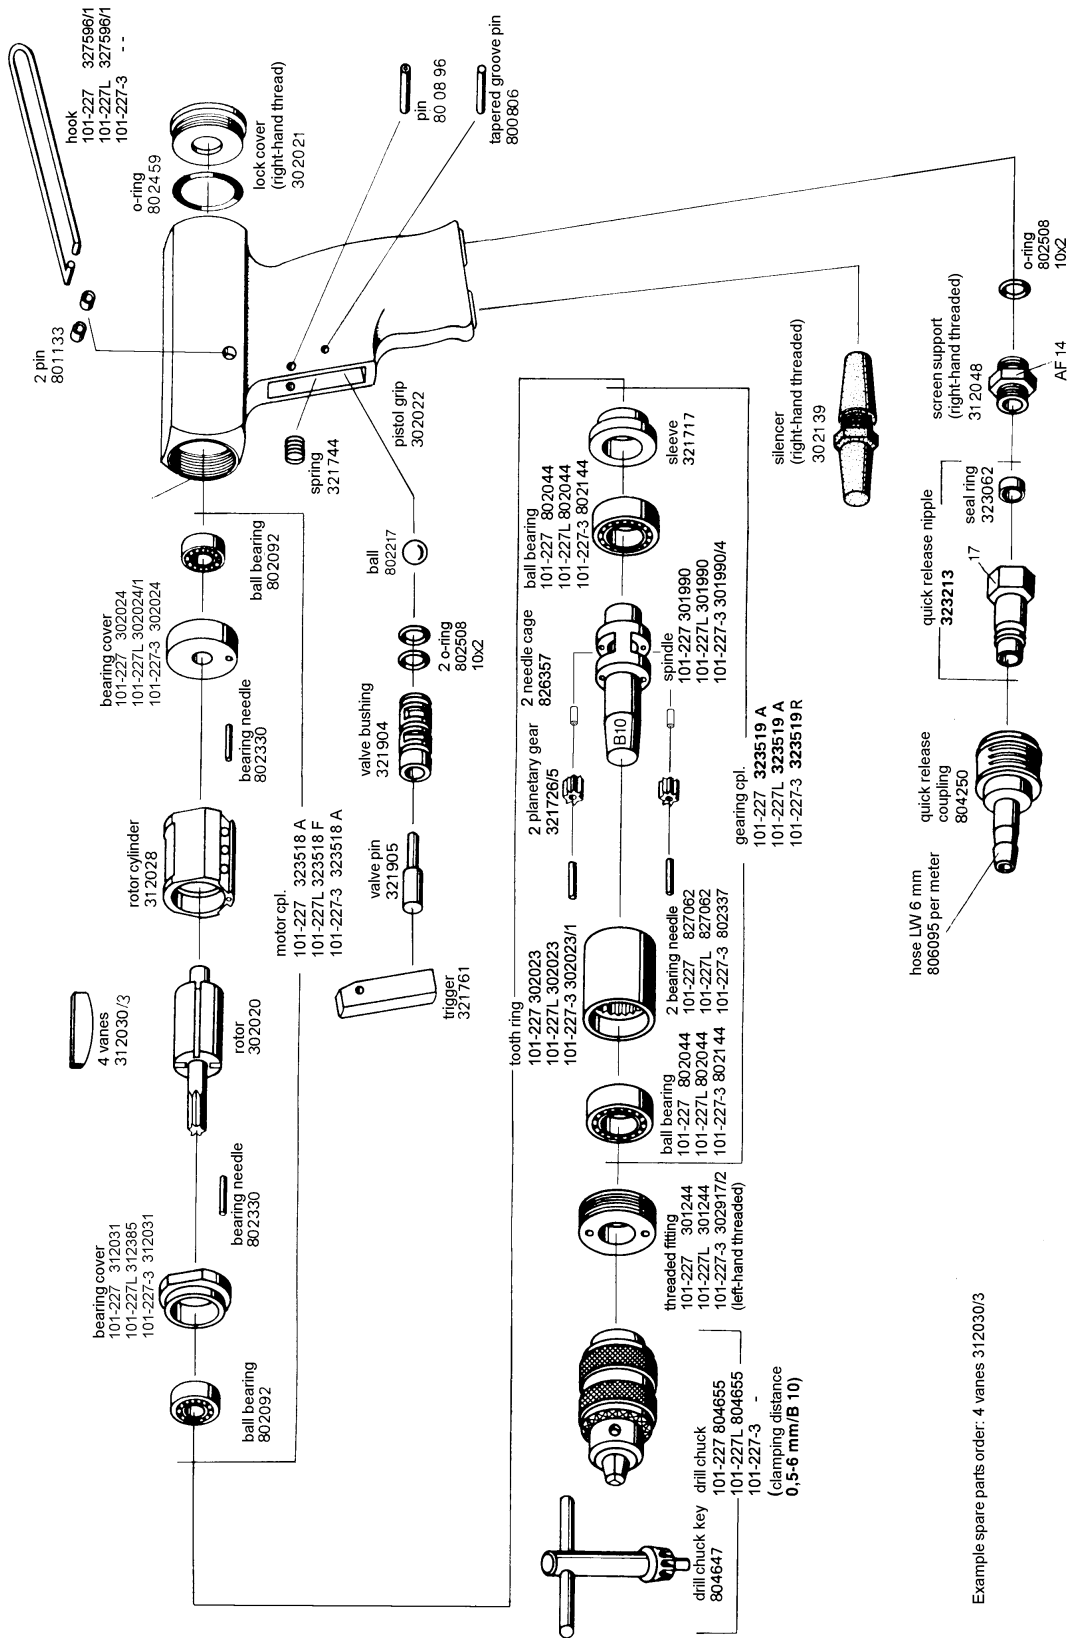

Example spare parts order: 4 vanes 312030/3

## 7 Maintenance and Upkeep

Operator can perform inspection and maintenance. Only specialized personnel may perform assembly or disassembly of this equipment. Faulty assembly may lead to danger for the operator and to permanent damage of the equipment

This drill spindle requires little maintenance. If the following rules are observed, the tool reaches its promised high life span and remains in a safe condition to use.

- Regularly check equipment for external damage.
- Check the air filter (bleed water condensation on a regular basis) and the oil reservoir, as well as the oiler adjustment [if operated with lubricated air]. We recommend DEPRAG-Oil, Part No. 790081 E (250 cm<sup>3</sup>).
- After repair and prior to assembly, grease gearing parts with DEPRAG grease Part No. 807293 (tube: 100 g).
- After assembly, drip 2 – 3 drops of oil into the drill's air intake.
- The gearing, balls and needle bearing, as well as the seal rings, must be greased every 500 operating hours or at least once a year.
- If operated in an oilfree environment, this maintenance is necessary every 250 hours
- If machine has not been operated for some time, drip a couple drops of oil into the motor and let drill run for 5 – 10 seconds.
- If drill malfunctions, we recommend to send the machine to DEPRAG.

### 7.1. Wear Parts

QUANTITY	NAME	PART No.
4	Vanes	312030/3

## 8 Trouble Shooting

In the case of a malfunction, check and observe all instructions contained in this technical documentation. If necessary, adjust equipment as needed.

Possible faults and their causes are shown below:

ERROR	REASON	SOLUTION
Insufficient Power	Air pressure too low	Minimum air pressure should be 90 PSI for maximum performance
	Restriction in air hose	Remove bends or other restrictions
	Hose I.D. is too small	Use required hose I.D.
	Screen Support or silencer clogged	Clean screen support or exchange with new one
	Vanes are worn	Exchange vanes
Machine does not start	No air; shut-off valve is closed.	Open shut-off valve
	Vanes are worn	Exchange vanes

If necessary, please send tool to DEPRAG for service.

## 9 Delivery Capacity

Please check the delivery capacity in regards to its completeness.

QUANTITY	NAME	PART No.
1	Operating Instruction Booklet	010311 EN
1	Drilling Machine	302018 A/C/D

## 10 Storage

Unused machines should be stored in a dry, locked area.

## 11 Technical Data

**Manufacturer** DEPRAG SCHULZ GMBH u. CO.  
**Address** Kurfürstenring 12 - 18 Postfach 1352  
 D-92224 Amberg D-92203 Amberg  
**Phone** 09621/371-0  
**Fax** 09621/371-120  
  
**Subsidiary** DEPRAG INC.  
**Address** 645 Hembry Street  
 Lewisville, TX 75057  
**Phone** (800) 4 DEPRAG = (800) 433-7724  
**Fax** (214) 221-8163

### Technical Data:

CONSTRUCTION : FORM	DRILLING MACHINE		
	PISTOL GRIP		
	MODEL No.	101-227	101-227L
PART No.	302018 A	302018 C	302018 D
Drilling into Steel up to (mm/in.)	4 / <sup>5</sup> / <sub>32</sub>		
Drilling into Aluminum up to (mm/in.)	6 / <sup>15</sup> / <sub>64</sub>		
Drill Chuck Chucking Range (mm)	0,5-6		
Drill-Collet DIN 238	B10		
Speed, unloaded (rpm)	4000		
Air Consumption, under load (m <sup>3</sup> /min / cfm)	0,35 / 12		
Power KW	0,17		
Distance Spindle Centre to Outside of Housing (mm)	15		
Length (mm)	150		
Weight (kg/lbs)	0,6 / 1,35		
Required Hose I.D. (mm/in.)	6 / <sup>1</sup> / <sub>4</sub>		
Connecting thread	G1/4A		
Noise level (dB(A))	75		
Vibration m/s <sup>2</sup>	<2,5		

## 12 Disposal

Unused machines should be stored in a dry, locked area. Observe local and environmental regulations for the separation and recycling of materials.



**Recycle waste oil to avoid environmental contamination!**

## 13 Conformity Declaration EC-Conformity Declaration according to the EC-Machine-Guidelines 98/37/EC, Amendment IIA

We,

DEPRAG SCHULZ GMBH & CO.  
PO Box 1352  
D-92203 Amberg

hereby confirm, that the design of the  
Drilling Machine

101-227

101-227L

101-227-3


conforms to the following, relevant regulation:

- EC-Machine-Guidelines, Version 98/37/EC, Amendment No. 1 and No. 2.2.

Applicable Standard:

- EN 292

Amberg, 31.08. 2004

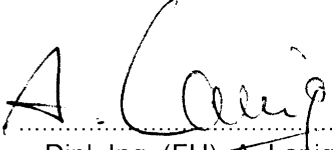  
Dipl. Ing. (FH) A. Lanig  
Mr. Design Dept.

## 14 Service Locations and Authorized Partners

### ARGENTINA

**ERIN s.a.**  
Av. Constituyentes 5751  
RA-1431 Buenos Aires  
Tel./Fax: +54 (0) 11 / 4573.1313

### AUSTRIA

**Amersin Olschinsky GmbH**  
Kastnerweise 1  
A-2441 Mitterndorf a.d. Fischa  
Tel.: +43 (0)1 / 8 69 87 66  
Fax: +43 (0)1 / 8 65 16 97  
Internet: <http://www.amersin.at>  
e-mail: [information@amersin.at](mailto:information@amersin.at)

### AUSTRALIA

**De Rossi Industrial Pty. Ltd.**  
Unit 1 – 2 / 600 Liverpool Road  
Strathfield South, N.S.W. 2136  
Tel.: +61 (0)2 / 8732.7200  
Fax: +61 (0)2 / 8732.7299  
e-mail: [sales@derossi.com.au](mailto:sales@derossi.com.au)

### BELGIUM

**Aijkens en Zumpolle B.V.**  
Postbus 29  
NL-5306 ZG  
Brakel/Niederlande  
Tel.: +31 (0)4 18 / 67 18 16  
Fax: +31 (0)4 18 / 67 32 17  
Internet: <http://www.zumpolle.net>  
e-mail: [info@zumpolle.net](mailto:info@zumpolle.net)

### BRAZIL

**METALFEMA Ltda.**  
Rua Saõ Pedro, 786  
Saõ Leopoldo – RS –  
BRAZIL  
ZIP 93.010-260  
Tel.: +55 (0) 51 / 592.4050  
Fax: +55 (0) 51 / 590.1856  
e-mail: [mtfma@zaz.com.br](mailto:mtfma@zaz.com.br)

### PR CHINA

**DEPRAG China**  
DEPRAG Assembly Technologies  
(Suzhou) Co.Ltd.  
No. 5, Xinghan St, Blk. A#06-16  
Suzhou 215021, P.R. China  
Tel.: +86 (0) 512 – 6767 – 1180 – 100  
Fax: +86 (0) 512 – 6767 – 1190  
Internet: [www.deprag.com.cn](http://www.deprag.com.cn)  
e-mail: [biz@deprag.com.cn](mailto:biz@deprag.com.cn)  
e-mail: [d.hua@deprag.com.cn](mailto:d.hua@deprag.com.cn)

### CROATIA

**SM AUTOMATIKA D.O.O**  
Trg i. Kukuljevica 6  
HR-10090 Zagreb  
Tel.: +385(0)13 89 41 79  
Fax: +385(0)13 87 89 78  
Internet: <http://www.sm-automatika.hr>  
e-mail: [info@sm-automatika.hr](mailto:info@sm-automatika.hr)

### CZECHIA/SLOWAKIA

**DEPRAG CZ a.s.**  
ul. T.G. Masaryka 113  
CZ -50781 Lázně Bělohrad  
Tel.: +420 (0) 4 93 / 79 24 11  
Fax: +420 (0) 4 93 / 79 25 12  
Internet: <http://www.deprag.com>  
e-mail: [info@deprag.cz](mailto:info@deprag.cz)

### DENMARK

**DEPRAG Scandinavia AB**  
Gap Sundins väg 3  
SE-63346 Eskilstuna  
Tel.: +45 (0) 98 57 22 50  
Fax: +45 (0) 98 57 22 53  
Internet: <http://www.deprag.com>  
e-mail: [keld.branner@get2net.dk](mailto:keld.branner@get2net.dk)

### ESTLAND

**Pneumacon OY**  
Läkkisepäntie 4  
FI-00620 Helsinki  
Tel.: +358 (0) 9 / 7288.160  
Fax: +358 (0) 9 / 7288.1610  
Internet: <http://www.pneumacon.fi>  
e-mail: [info@pneumacon.fi](mailto:info@pneumacon.fi)  
e-mail: [harry.lindroos@pneumacon.fi](mailto:harry.lindroos@pneumacon.fi)

### FINLAND

**Pneumacon OY**  
Läkkisepäntie 4  
FI-00620 Helsinki  
Tel.: +358 (0) 9 / 7288.160  
Fax: +358 (0) 9 / 7288.1610  
Internet: <http://www.pneumacon.fi>  
e-mail: [info@pneumacon.fi](mailto:info@pneumacon.fi)  
e-mail: [harry.lindroos@pneumacon.fi](mailto:harry.lindroos@pneumacon.fi)

### FRANCE

**DEPRAG Sarl**  
9, rue du Général Frère  
F-67500 Haguenau  
Tel.: +33 388 / 06.14.17  
Fax: +33 388 / 93.01.08  
e-mail: [depragfrance@evc.net](mailto:depragfrance@evc.net)

### GERMANY

**Werk Amberg**  
Kurfürstenring 12-18,  
D-92224 Amberg  
Postfach 1352,  
D-92203 Amberg  
Tel.: +49 (0) 9621 / 3 71-3 71  
Fax: +49 (0) 9621 / 3 71-1 20  
Internet: <http://www.deprag.com>  
e-mail: [info@deprag.de](mailto:info@deprag.de)

### GREAT BRITAIN

**DEPRAG Limited**  
Holly Farm Business Park  
Honiley, Kenilworth  
Warwickshire CV8 1NP  
Tel.: +44 (0) 1926 485480  
Fax: +44 (0) 1926 485481  
Internet: [www.deprag.co.uk](http://www.deprag.co.uk)  
e-mail: [m.searle@deprag.co.uk](mailto:m.searle@deprag.co.uk)

### GREECE

**D. Panayotidis – J. Tsatsis s.a.**  
6 Pireos Street – Moschaton-  
Athen  
Tel.: +30 (0) 1 / 4810.817-8-9  
Fax: +30 (0) 1 / 482 96 73

### HUNGARY

**ADLER '91**  
Export/Import Kereskedelmi  
Takarék u. 18/B  
H-8800 Nagykanizsa  
Tel./Fax: +36 (0) 93 / 314 633  
e-mail: [adler91adlovits@chello.hu](mailto:adler91adlovits@chello.hu)

### Nóniusz Tool Trading House Ltd.

Köbányai út. 47/6  
H-1101 Budapest  
Tel.: +36 (0) 1 / 260 030 30  
Fax: +36 (0) 1 / 260 060 83  
Internet: <http://www.noniusz.hu>  
e-mail: [noniusz@noniusz.hu](mailto:noniusz@noniusz.hu)

### IRAN

**FARA SANAT Co.**  
No. 117, Abzar & Yaragh passage  
Postcode 1136748173  
Tehran  
Tel.: 021 / 673.2918 / 670.6340  
Fax: 021 / 673.4757

### IRELAND

**Production Equipment Ltd.**  
Riverside Commercial Estate  
IRL-Galway  
Tel.: +353 (0) 91 / 745 100  
Fax: +353 (0) 91 / 751 299  
e-mail: [sales@productionequipment.ie](mailto:sales@productionequipment.ie)

### ITALY

**DREX PALLOTTI S.r.l**  
Via A. Manzoni, 19  
I-20090 Vimodrone/Mi  
Tel.: +390 02 / 2740 0561 + 0569  
Fax: +390 02 / 2740 0607  
e-mail: [pallotti@drex.com](mailto:pallotti@drex.com)

### JAPAN

**NIPPON GESCO Ltd.**  
P.O. Box 255 Kyobashi Tokyo  
Ginza Matsuyoshi Bldg.  
17 – 8, 7-Chome, Ginza,  
Chuo-Ku, Tokyo  
Tel.: +81 (0) 3 / 3542.2400  
Fax: +81 (0) 3 / 3542.2420  
e-mail: [mail@gesco.co.jp](mailto:mail@gesco.co.jp)

## KOREA (South)

### Handtools

#### DONG WON POWER-TECH.INC.

108-10 Moonjung-Dong

Songpa-Ku

Seoul, Korea

Tel.: +82 (0) 2 / 409.1344

Fax: +82 (0) 2 / 409.1345

e-mail: [kilpyungdw@dreamwiz.com](mailto:kilpyungdw@dreamwiz.com)

### Screwdriving / Assembly Technology Fatec Co.Ltd.

#717 LG Palace B/D

165-8 Dongkyo-dong

Mapo-gu Seoul,

Korea

Tel.: +82 (0) 2 / 2 688.2152

Fax: +82 (0) 2 / 2 688.2893

e-mail: [fatec@chollian.net](mailto:fatec@chollian.net)

e-mail: [fatec@fatec.co.kr](mailto:fatec@fatec.co.kr)

## LITHUANIA

### HIDROTEKA

P.O. Box 572

LT-3028 KAUNAS

Tel.: +370 (0) 37 / 352195

Fax: +370 (0) 37 / 351952

e-mail: [hidroteka@hidroteka.lt](mailto:hidroteka@hidroteka.lt)

## LUXEMBOURG

### Comptoir Technique et Industriel

321, Route d'Arlon

L-8011 Strassen

Penang, MALAYSIA

Tel. +352 / 31 31 40

Fax: +352 / 31 31 95

## MALAYSIA

### FI INNOVATION ENTERPRISE

175, MK D Jalan Bahru

Balik Pulau 11000

Penang, MALAYSIA

Tel. +60/13/ 449.0386 / +60/16/ 403.6797

Fax: +60/4/ 866.0785

e-mail: [farisfi@tm.net.my](mailto:farisfi@tm.net.my)

## NETHERLANDS

### Zumpolle B.V.

Postbus 29

NL-5306 ZG

Brakel/Niederlande

Tel.: +31 (0) 4 18 / 67 18 16

Fax: +31 (0) 4 18 / 67 32 17

Internet: <http://www.zumpolle.net>

e-mail: [info@zumpolle.net](mailto:info@zumpolle.net)

## NORWAY

### Deprag Scandinavia AB

Gap Sundins väg 3

SE-63346 Eskilstuna

Universal Import

Tel.: +47 (0) 2 / 2681.530

Fax: +47 (0) 2 / 2199.127

## POLAND

### ELKREM SPOLKA Z O.O.

ul. Wielki Row 40B

87-100 Torun

Tel. +48 / 56 / 662.3881

FAX +48 / 56 / 662.3882

e-mail: [elkrem@to.onet.pl](mailto:elkrem@to.onet.pl)

## PORTUGAL

### Anibal Pires Lda.

A.P. 23

E.N. 1 – Mourisca do Vouga

P-3750 TROFA AGD

Tel.: +351 (0) 234 / 646.820

Fax: +351 (0) 234 / 646.815

Internet: <http://www.anibalpires.pt>

e-mail: [anibalpires@mail.telepac.pt](mailto:anibalpires@mail.telepac.pt)

## SINGAPORE

### Testel Systems Pte Ltd

1200 Depot Road # 04-07/09

Singapore 109675

Tel.: +65 / 6271-3688

Fax: +65 / 6271-8866

Internet: <http://www.testel.com.sg>

e-mail: [sunny@testel.com.sg](mailto:sunny@testel.com.sg)

## SLOVENIA

### MB-NAKLO D.O.O.

Toma Zupana 16

SLO-4202 NAKLO

Tel.: +386 (0) 4 / 277 17 00

Fax: +386 (0) 4 / 277 17 17

e-mail: [mb-naklo@siol.net](mailto:mb-naklo@siol.net)

## SPAIN

### ALCOTAN SISTEMAS S.A.

pº de la Direccion, nmro. 95,

local

E-28039 Madrid

Tel.: +349 (0) 1 / 311.17.84 + 311.18.01

Fax: +349 (0) 1 / 311.60.53

e-mail: [alcotansis@jazzfree.com](mailto:alcotansis@jazzfree.com)

Barcelona office:

Passeig de la Mare de Déu del

Coll, 122-124

E-08023 Barcelona

Tel.: +349 (0) 3 / 2 19 77 43

## SWEDEN

### DEPRAG Scandinavia AB

Gap Sundins Väg 3

S-633 46 Eskilstuna

Tel.: +46 (0) 16-12 61 10

Fax: +46 (0) 16-13 31 88

Internet: <http://www.deprag.se>

e-mail: [info@deprag.se](mailto:info@deprag.se)

## SWITZERLAND

### LIMATEC Automation AG

Burgunderstr. 13

CH-4562 Biberist

Tel.: +41 (0) 32 / 6542900

Fax: +41 (0) 32 / 6542901

Internet: <http://www.limatec.ch>

e-mail: [office@limatec.ch](mailto:office@limatec.ch)

## TAIWAN

### I HEN MACHINE Co.Ltd.

6F-9, No. 12, Lane 609, Sec. 5

Chung-Hsin Road,

San-Chung City

241 Taipei Hsen

Tel.: +886 (0) 2 / 2999.6766

Fax: +886 (0) 2 / 2999.6236

## TURKEY

### MEKA AUTOMOTIVE ASSEMBLY EQUIPMENTS

Dicle Caddesi, Tunca Sokak No : 6

Beysukent - Beytepe - Ankara -

TURKEY

Tel. +90 / 312 / 236 2558

Tel. +90 / 312 / 236 2559

FAX +90 / 312 / 236 0991

e-mail: [melih@me-ka-assembly.com](mailto:melih@me-ka-assembly.com)

[www.me-ka-assembly.com](http://www.me-ka-assembly.com)

## USA, MEXICO, CANADA

### DEPRAG INC.

645 Hembry St. / P.O. Box 1554

Lewisville, TX 75057-4726

Phone: +1 / 972 / 221 – 8731

Fax: +1 / 972 / 221 – 8163

Toll Free: (800) 4 DEPRAG

Internet: <http://www.deprag.com>

e-mail: [deprag@depragusa.com](mailto:deprag@depragusa.com)

## VENEZUELA

### Suministros Tecnicos SUMTEC C.A.

Av. Francisco de Miranda, Centro Plaza

Torre C, Piso 16, Oficina C16 A-B

Urb. Los Palos Grandes

Caracas 1060

Tel.: +58 (0) 212 – 28 56 41 0

Fax.: +58 (0) 212 – 28 51 94 7





# DEPRAG

**DEPRAG SCHULZ GMBH u. CO.**

Postfach 1352, D-92203 Amberg

Kurfürstenring 12-18, D-92224 Amberg

(09621) 371-0

Fax (09621) 371-120

Internet: <http://www.deprag.com>

e-mail: [info@deprag.de](mailto:info@deprag.de)



ZERTIFIZIERT NACH DIN EN ISO 9001

---

Aug-04 Änderungen vorbehalten / Technical alterations reserved