

## DEPRAG Clamp Force Control



Screwdriving procedure DEPRAG CFC: constant clamp force despite fluctuating tightening torques

This **adaptive screwdriving procedure** ensures a **constant clamp force** when drive-in torque values are fluctuating. The whole screw assembly consists of the head contact recognition and a screw assembly to differential torque or to a specific angle.

Typical area of application is direct screwdriving into plastic and/or metal. The new screwdriving procedure for DEPRAG EC servo screwdrivers in combination with the AST40 is used for greatly varying tightening torques.

These fluctuations may result from alterations in the geometry of the screws and/or hole, the component's material structure, variations in surface quality of the screw thread, elasticity of elements or seating processes. The reliable recognition of head contact results in a constant clamp force.


### Advantages:

- Improved constancy of the pre-load force
- Calculation takes into account coincidental fluctuations in the torque during the process, which are not caused by head contact
- Minimal parameter adjustments


### Method of calculation:

The main element is the head contact recognition: based on the torque flow, a mathematical valuation function is continually generated. Head contact is deemed to be recognized as soon as this function exceeds a fixed limit value. Torque and angle are calculated backwards to the moment of head contact.

## Screwdriving procedure:

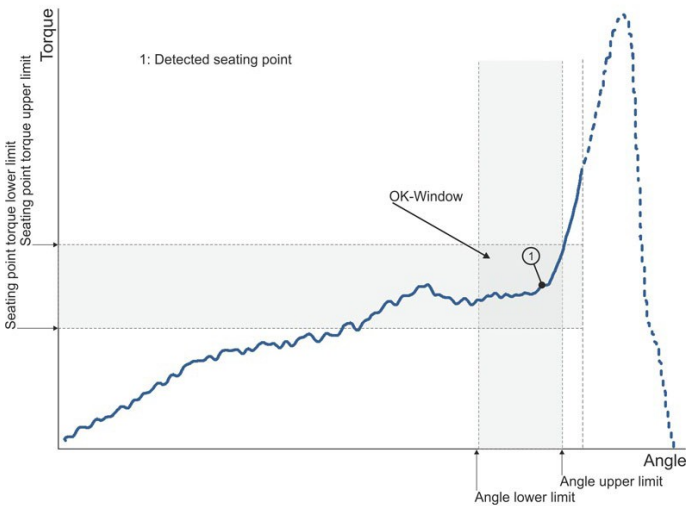

Torque procedure example – parameter head contact recognition screw template The torque upper limit serves as the shut-off criteria for the screwdriving step. The OK window for seating recognition can optionally be monitored using the seating point torque upper/lower limit. The end values can either be saved as the torque and angle values at the point of seating or the end of the screwdriving step. The end values of the screwdriving template seating recognition provide the reference for the following program section.

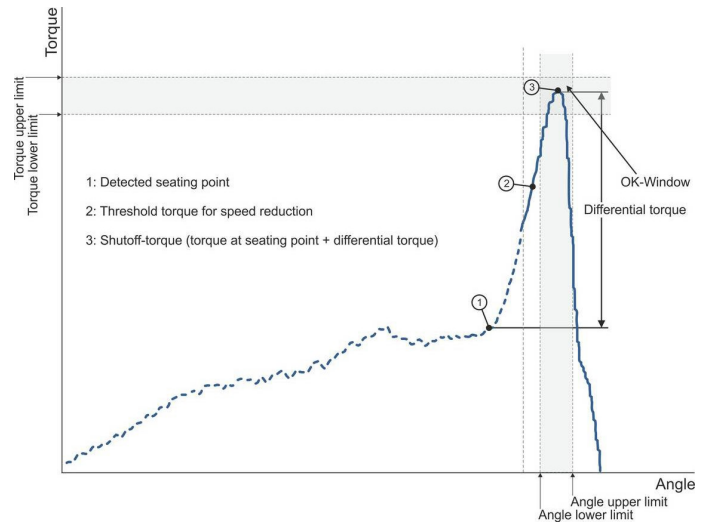

Screw assembly to differential torque relating to head contact recognition Screw assembly to angle can follow instead of screw assembly to differential torque.

### US-Contact:

Ms. Lori Logan  
Marketing Manager  
DEPRAG, Inc.  
640 Hembry Street  
Lewisville, TX 75057  
(800) 433-7724 (800 4 DEPRAG)  
(972) 221-8731  
l.logan@depragusa.com  
www.depragusa.com

Mr. Josh Parten  
Marketing Assistant  
DEPRAG, Inc.  
640 Hembry Street  
Lewisville, TX 75057  
(800) 433-7724 (800 4 DEPRAG)  
(972) 221-8731  
j.parten@depragusa.com  
www.depragusa.com

**DEPRAG**  
machines unlimited